



Waterproof Housing Userguide

Product Overview

Thank you for purchasing the IP68 waterproof housing.

If you have any queries or require help when using the waterproof housing please call us on +44(0)1495 212213 or contact your local representative.

To Assemble Unit:


1. Attach cable assembly to laser , screw in position to secure
2. Fit spring over cable
3. Slide laser/cable/spring into laser body holder
4. Slide sealing plug over cable
5. Slide endcap assembly over cable. Ensure cable clamp is not tight on cable.
6. Screw endcap onto laser body, ensuring sealing plug is correctly positioned.
7. Tighten endcap onto laser body, to create a waterproof seal.
8. Tighten cable clamp onto endcap assembly to create a waterproof seal.

Note:

When lens assemblies are needed to be changed it is important that the cable clamp is un-tightened to release the cable, otherwise the wires in the cable assembly may be disconnected from the plug

Diagrams

Waterproof Housing

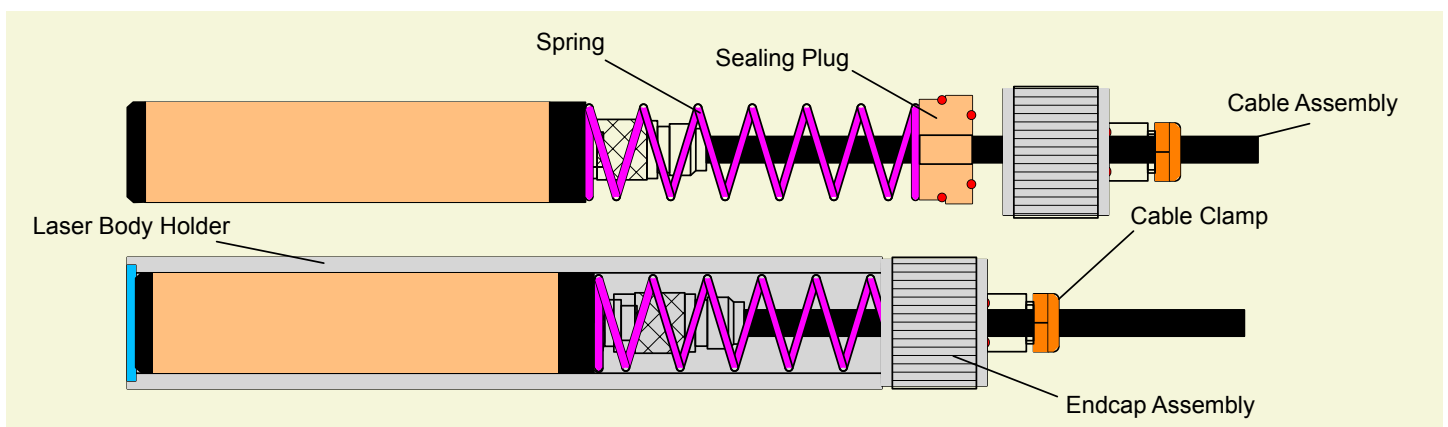

Drawings are not to scale.